


28T, 24T, 18T & 15T Systems

Installation instructions

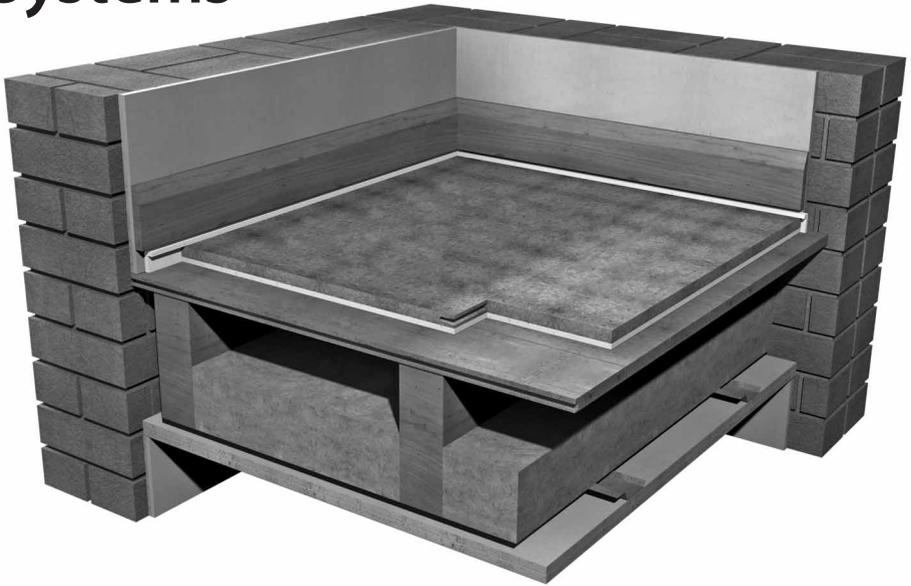

OVERLAY PLATFORM SYSTEM DIRECT TO FLOORBOARDS for

- New build
- Refurbishments
- Conversions
- Listed buildings requiring minimal structural change



PRODUCT DATA

Overall size:	Isocheck 28T	2400 x 600 x 28mm
	Isocheck 24T	2400 x 600 x 24mm
	Isocheck 18T	2400 x 600 x 18mm
	Isocheck 15T	1200 x 600 x 15mm
Resilient layer:		6mm Isofiba
Weight:	Isocheck 28T	23.0kg per sheet
	Isocheck 24T	19.0kg per sheet
	Isocheck 18T	13.0kg per sheet
	Isocheck 15T	5.2kg per sheet



DESCRIPTION

- ❑ The Isocheck 28T, 24T, 18T and 15T are high performance systems designed to reduce sound transmission through traditional joisted timber floors.
- ❑ To be used over existing floorboards for new build, refurbishments or conversions with a new resilient bar ceiling.



- Isocheck 28T, 24T, 18T or 15T over floorboards.
- 200mm x 70mm joists @ 450mm centres with 100mm 45kg/m³ insulation between joists.
- 20kg/m² double boarded 25mm o/a plasterboard on resilient bars @ 400mm centres perpendicular to joist direction.

INSTALLATION - GENERAL

- ❑ Apply Isocheck Acoustic Angled Flanking Band on the edges of the Isocheck boards just before they are pushed against the perimeter walls to isolate the board from the wall.
- ❑ Board fitting should begin at the furthest point from the entrance and marked out so as not to finish with any panels less than 200mm wide.
- ❑ The decking must be laid in broken bond pattern, with all joints glued and staggered.
- ❑ No Mechanical fixings should be used.
- ❑ Isocheck adhesive is applied to both the top of the tongue and the bottom of the groove on each side of each joint.
- ❑ The boards are then pushed tightly together. Surplus adhesive should be wiped away from the surface with a damp cloth.

PREPARATION

- ❑ The presence of steel work, lift shafts and even ceiling penetrations can often impair acoustic performance. If any of these (or other issues not previously declared) are present on your site, please contact us for additional advice.
- ❑ Floor should ideally be min. 18mm chipboard, OSB, decking ply or original floorboards with a continuous layer of 100mm (45kg/m³) mineral wool insulation between the joists. All nails and screws must be driven flush and securely fixed. The sub-floors should be level, sufficiently dry and swept clean to allow the Isocheck 28T, 24T, 18T or 15T to be laid flat.
- ❑ Installation of Isocheck 28T, 24T, 18T or 15T should **not** commence until roof, window glazing and wet trades are completed and the structure is watertight. Leave overnight for adhesive to cure before trafficking the newly installed system.

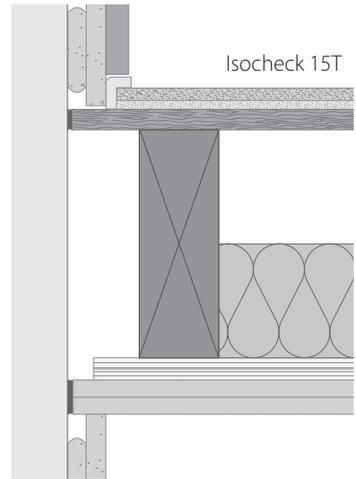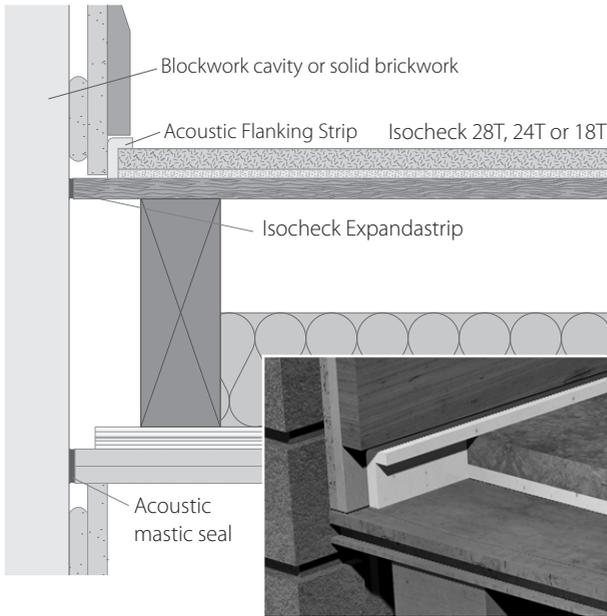

Flanking Strip turned back under skirting and trimmed flush with a sharp knife.

- ❑ Isocheck 28T, 24T, 18T or 15T must be kept in a dry storage area. Deliveries should be scheduled to coincide with availability of suitable dry storage areas.

INSTALLATION - DOORS, ARCHITRAVES & SKIRTINGS

- ❑ Door openings should have linings fitted prior to the installation of the acoustic floor. The isocheck boards should be carefully detailed to ensure a good fit. Although not ideal architraves and stops can be fixed after floor installation, leaving a 2/3mm gap from the surface of the floor.
- ❑ To prevent flanking transmission all skirting must be isolated from the floor surface. Before incorporation, place isocheck Flanking Strip around the edge of the Isocheck 28T, 24T, 18T or 15T boards before pushing into position.
- ❑ Remove any excess with a sharp knife, flush to the skirting face.

STUD PARTITIONING

- ❑ Stud partitioning should be built from the sub floor wherever possible. If it is your intention to build off the top of Isocheck 28T, 24T, 18T or 15T additional advice should be sought. It is good practice to isolate all partitions built from the sub-floor with isocheck Flanking Strip as this will improve the performance of the walls as well as the floors.

FLANKING STRIPS

- ❑ Isocheck Flanking Strips provide isolation of the flooring system from all vertical structures and penetrations. The Flanking Strip is trapped to the wall and returned down over the isocheck board as the perimeter boards are placed. The skirting board is then fixed to the wall securing the Flanking Strip between the skirting board and the isocheck.
- ❑ After the skirting board is installed, simply trim the Flanking Strip flush with a sharp knife.

PROTECTION

- ❑ The finished Isocheck 28T, 24T, 18T or 15T system should be protected with an appropriate layer immediately after being installed to prevent damage by any following tradesmen.

HANDLING

- ❑ Some Isocheck boards may be HEAVY. Please observe proper lifting methods and if transporting around site, by hand. Care should also be taken to protect hands from splinters during manual handling.

CUTTING

- ❑ The cutting of boards, either by hand or machine, will produce dust that may be an irritant if inhaled. USE dust masks when carrying out any cutting operations.

If in doubt on any area, please call Isomass prior to commencement of work.

INSTALLATION - KITCHENS & BATHROOMS

- ❑ Appliances and sanitary ware, with rigid plumbing connections that penetrate the system, should be isolated from the floating floor by cutting a hole up to 10mm larger than the service diameter and filling the gap with an acoustic sealant. Ideally kitchen worktops should be isolated from the wall with Impacta pads and trimmed flush with surface before tiling commences.

- ❑ In a kitchen, we recommend the kitchen units are installed on the sub-floor on pads, so that the Isocheck can terminate at the legs of the units. The plinth can then be installed to the kitchen unit legs, making a neat, flush finish.
- ❑ Lay the floor in areas where appliances will sit, allowing for adequate height below the work surfaces. If installing the units on the floating floor additional advice should be sought to reduce the potential for unwanted impact flanking noise.
- ❑ In a bathroom, we recommend the bath should be supported from the sub-floor on isolation pads, and the floating floor terminate at the legs of the bath as close as possible. The bath panel can then be installed making a neat, flush finish. Plywood the same height as the Isocheck should be laid under the bath, toilet and wash basin area and the joints filled with silicon or an alternative acoustic sealant where necessary.

INSTALLATION - CEILINGS

- ❑ Ceiling boards should be installed first, especially before any dry-lining of walls (such as dot & dab) to prevent potential flanking transmission.
- ❑ Ceilings should be boarded with a minimum mass of 20kg/m², and must be fixed to resilient bars or suspended from a metal frame system in accordance with manufacturers recommendations.

Every effort has been taken in the preparation of this sheet to ensure the accuracy of representations contained herein. Recommendations as to the use of materials, construction details and methods of installation are given in good faith and relate to typical situations. However, every site has different characteristics and reliance should not be placed upon the foregoing recommendations. Advice can be given as to specific applications of the products, upon request to isomass building products.



Unit 14 Papworth Business Park, Stirling Way,
Papworth Everard, Cambridgeshire CB23 3GY

Tel: 0330 175 8228 • Fax: 01223 651 530 • Email: info@isomass.co.uk • www.isomass.co.uk